

# MediPaw® Soft Bandage Boot Measurement Chart




**1**

Print & verify the chart:

- Print the Sizing Chart at 100% size.
- Verify the accuracy of this chart with a ruler before measuring.

**2**

Measure your patient's paw:

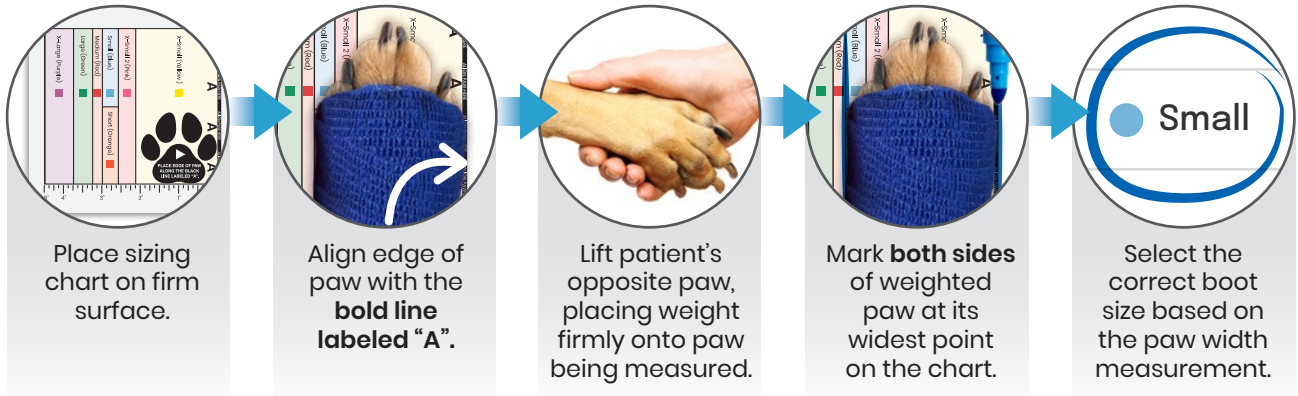

Bandage width	Boot height	Boot size	Bandage width	Boot height	Boot size
2 in (5.08 cm)	6 in (15.24 cm)	X Small	3 in (7.62 cm)	10.5 in (26.67 cm)	Small
2.5 in (6.35 cm)	8.25 in (20.955 cm)	X Small 2	3.25 in (8.255 cm)	13 in (33.02 cm)	Medium
3 in (7.62 cm)	7 in (17.78 cm)	Short	3.75 in (9.525 cm)	18 in (45.72 cm)	Large
			4.5 in (11.43 cm)	23 in (58.42 cm)	XL

## MEASUREMENT TIPS:

- Measure the width of the paw and the bandage (if applicable) to ensure a correct fit.
- If you can't print the chart, draw a line on either side of the patient's on blank paper, measure the width and refer to the chart above.

### Questions?

Please contact us!  
 info@medivetproducts.com  
 P; 800.245.3413  
 F: 646.783.3808

www.medivetproducts.com

Protective Book  
 U.S. Patent No. D747,048 S

